Home Decorators

Collection

BF-20432 OXFORD COLLECTION 3-DRAWER CONSOLE TABLE

ASSEMBLY INSTRUCTIONS

Made In China

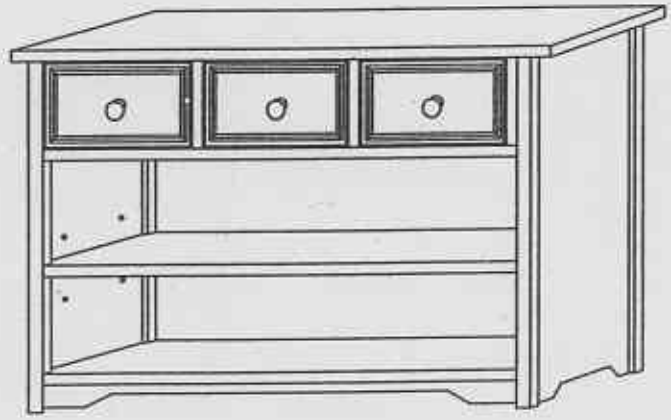

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, Compare with parts list to be sure all part are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C 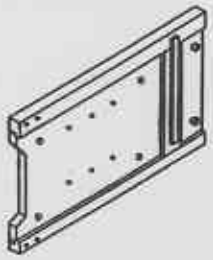 LEFT SIDE PANEL-1PC
D 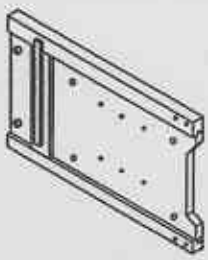 RIGHT SIDE PANEL-1PC	E STAND PANEL-2PCS	F 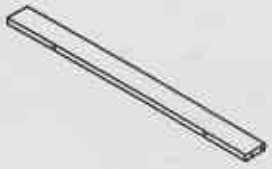 BACK LOW PANEL-1PC
G BACK PANEL-1PC	H 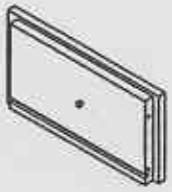 DRAWER PANEL FRONT-3PCS	I DRAWER PANEL SIDE-6PCS
J 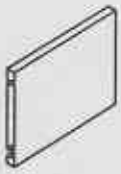 DRAWER PANEL BACK-3PCS	K 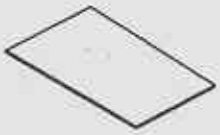 DRAWER PANEL BOTTOM-3PCS	L 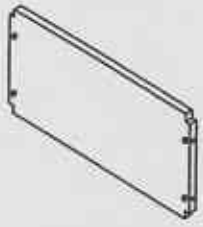 ACROSS PANEL-1PC

M 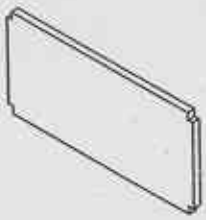 SHELF-1PC	N SCREWS-24PCS	O SCREWS-4PCS
P DOWELS-11PCS	Q SCREWS-12PCS	R SHELF SUPPORTS-4PCS
S CAM-BOLTS-20PCS	T CAM-LOCKS-20PCS	U KNOB-3PCS
V CAM-TOOL-1PC	W SCREWS-3PCS	F1 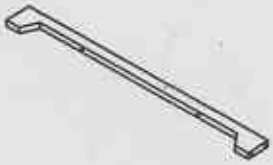 FRONT LOW PANEL-1PC

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

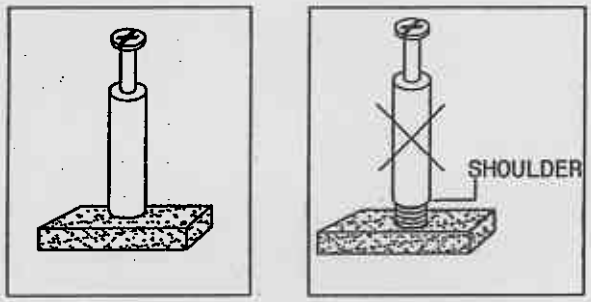

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

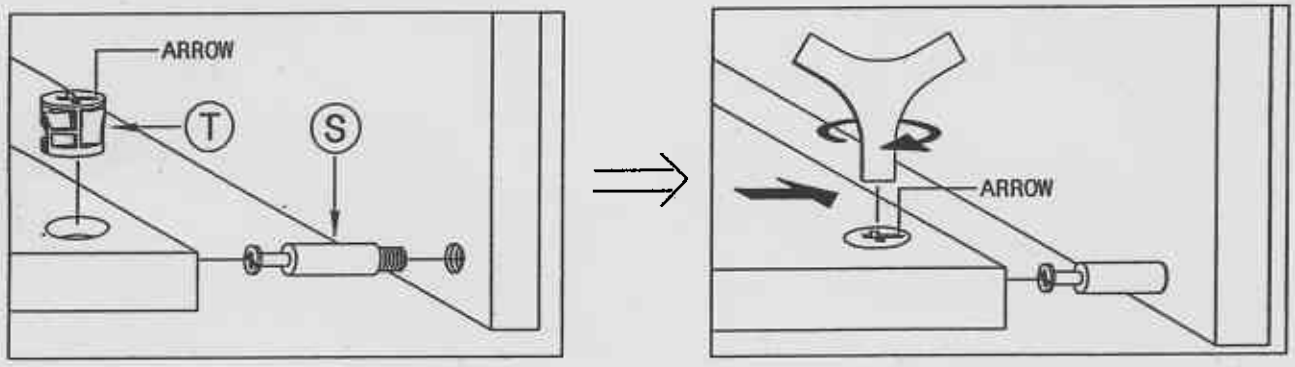

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

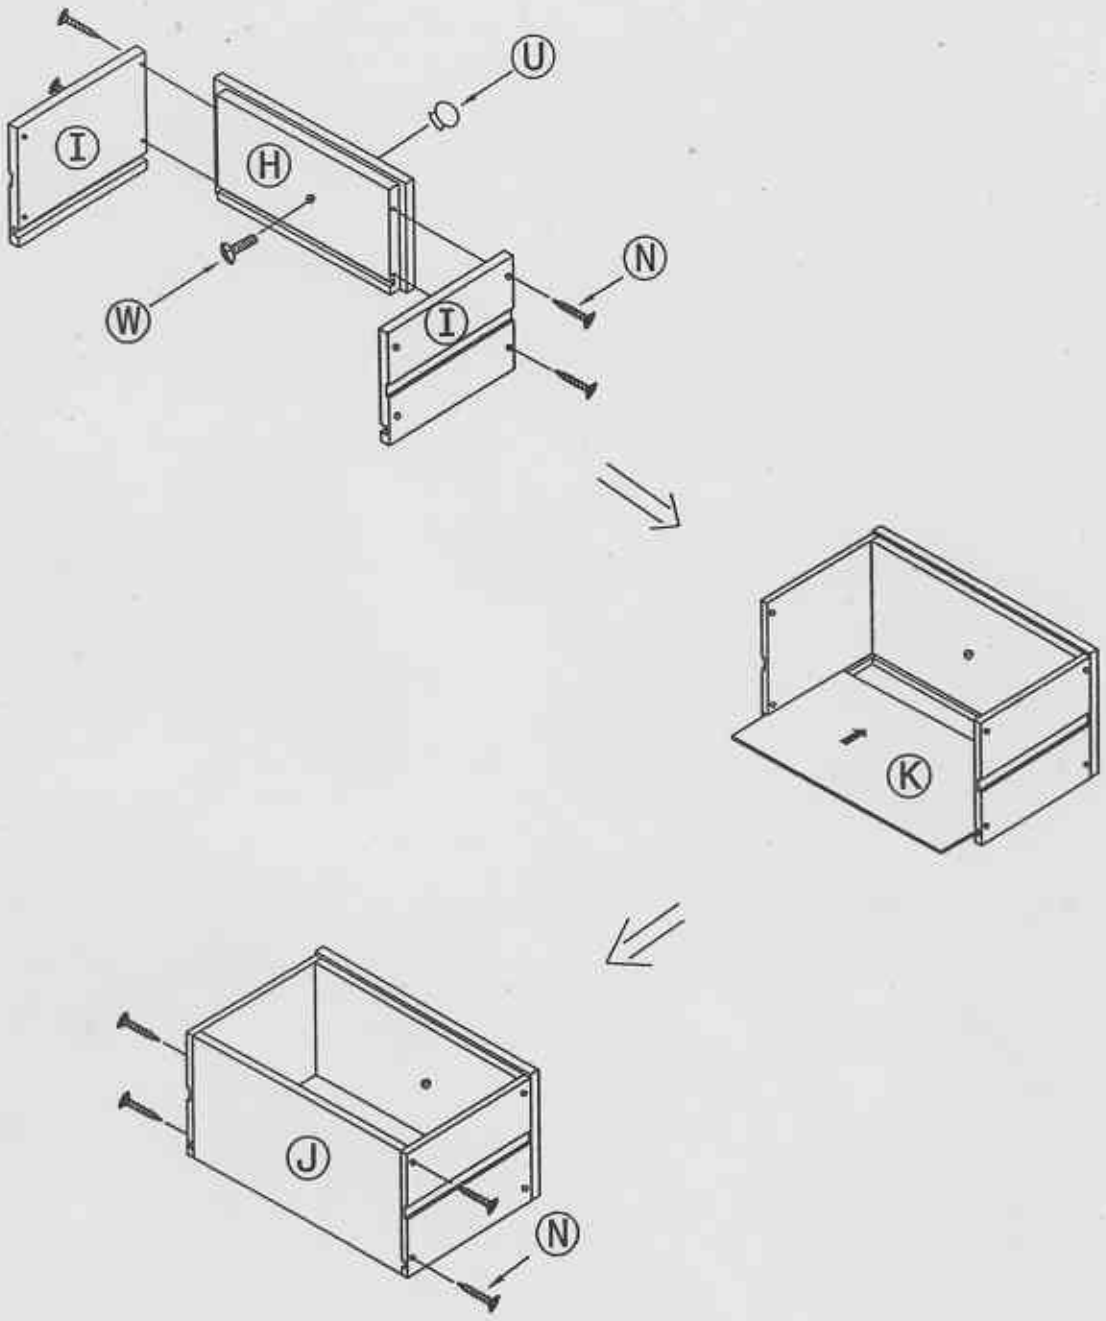

1) .ASSEMBLE THE DRAWER.

- ATTACH DRAWER SIDE PANEL(I)USING SCREWS(N)AND ATTACH KNOB(U)USING SCREWS(W).
- INSERT DRAWER BOTTOM PANEL(K)INTO SLOT IN DRAWER SIDE PANEL(I).
- ATTACH DRAWER BACK PANEL(J)TO BETTWEEN IN DRAWER SIDE PANEL(I)USING SCREWS(N).

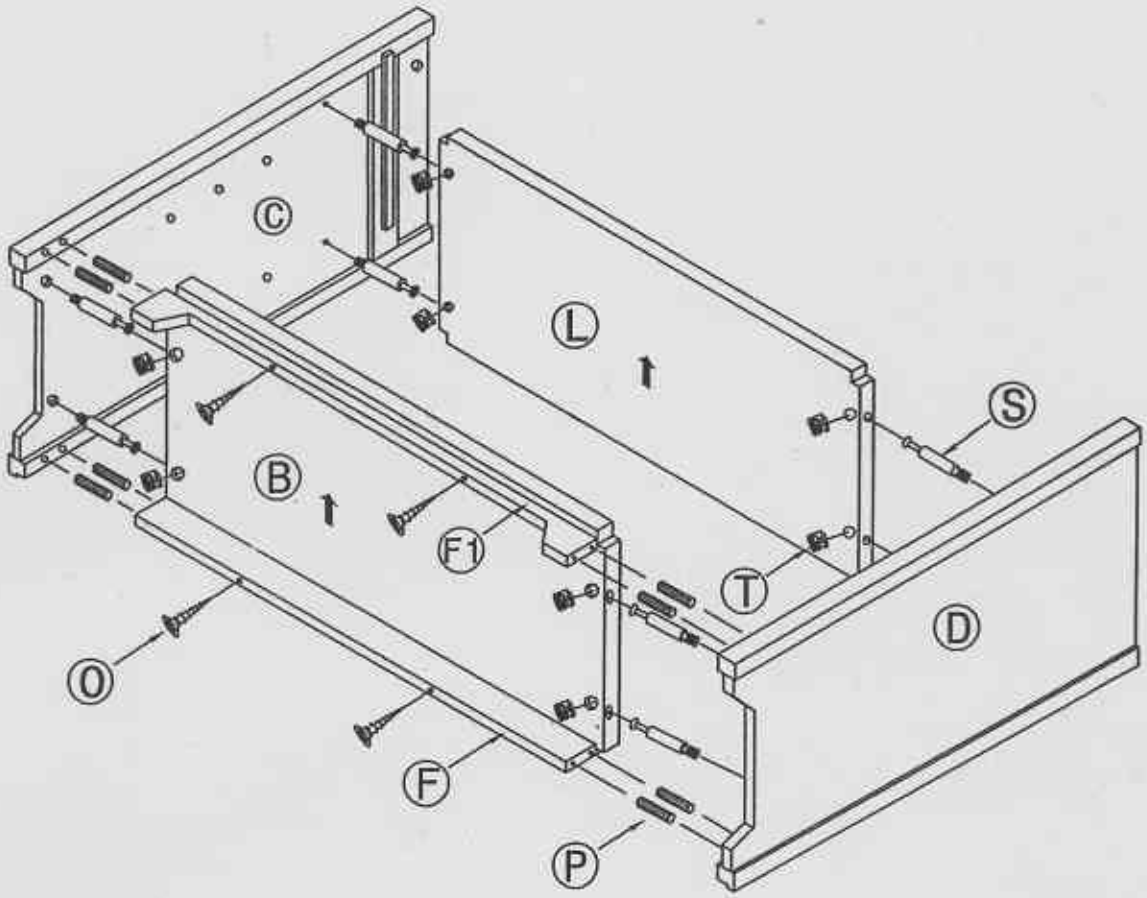

2). ASSEMBLE SIDE PANEL(C/D).

- ATTACH THE FRONT/BACK LOW PANEL(F1/F)TO BOTTOM PANEL(B)USING 4 SCREWS(O).
- INSERT THE 8 DOWELS(P)INTO HOLES IN FRONT/BACK LOW PANEL(F1/F).
- ROTATE THE 8 CAM-BOLTS(S)INTO HOLES IN SIDE PANEL(C/D).
- PLACE CAM-BOLTS(S)INTO HOLE IN PANEL(B/L)AND ATTACH USING 8 CAM-LOCKS(T).

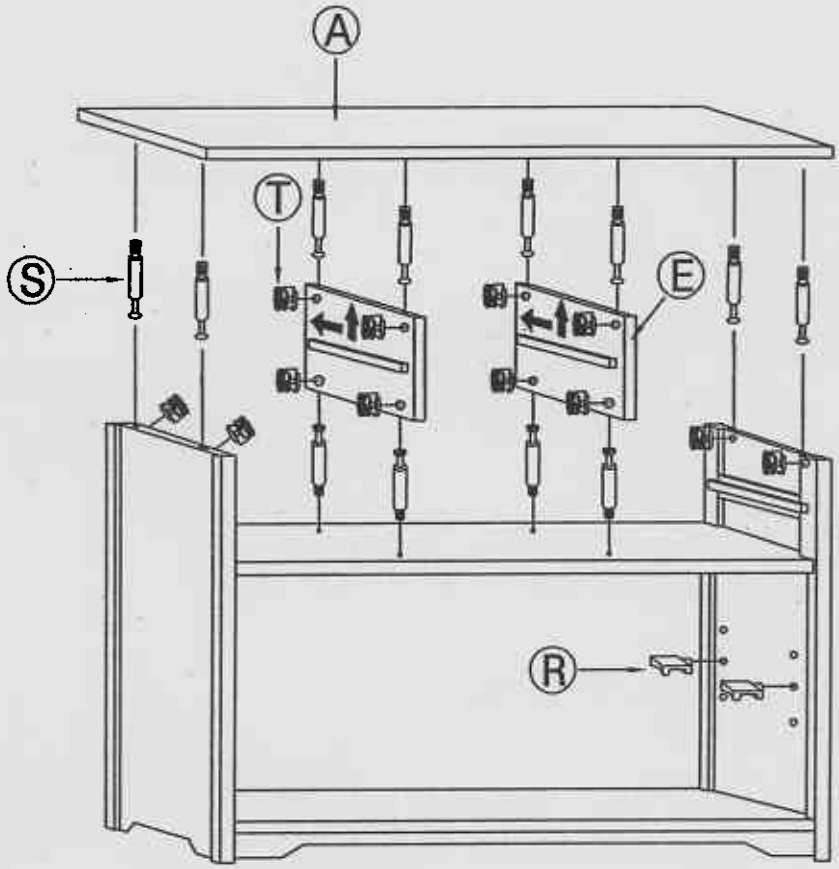

3). ASSEMBLE TOP PANEL(A).

- ROTATE THE 12 CAM-BOLTS(S)INTO HOLES IN TOP PANEL(A)AND ACROSS PANEL(L).
- PLACE CAM-BOLTS(S)INTO HOLE IN PANEL(C/D/E)AND ATTACH USING 12 CAM-LOCKS(T).
- INSERT THE 4 SHELF SUPPORTS(R)INTO HOLES IN SIDE PANEL(C/D).

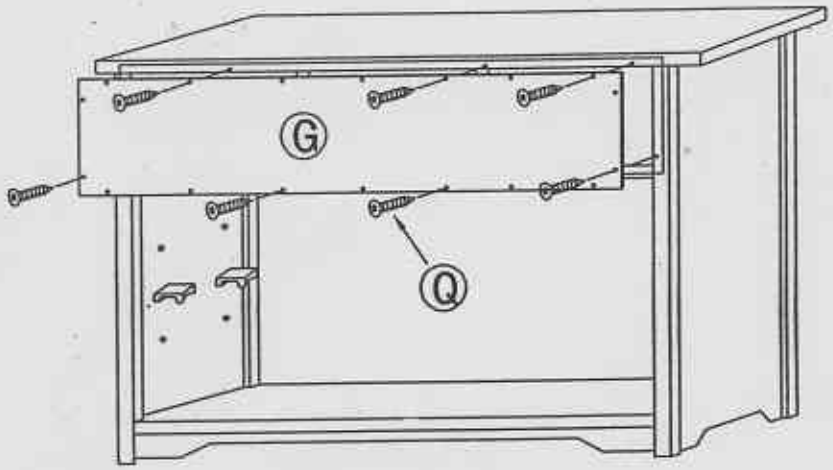

4). ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G)TO TOP/SIDE/ACROSS PANEL USING SCREWS(Q).

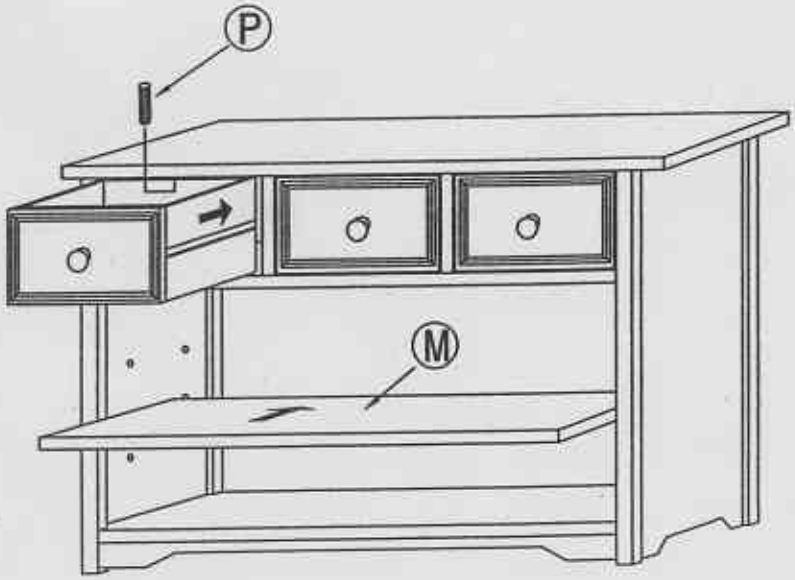

5). ASSEMBLE THE SHELF(M).

- PUT THE SHELF(M)ONTO THE SHELF SUPPORTS(R).
- INSERT THE DOWELS(P)INTO HOLES IN TOP PANEL(A)AND SLIDE DRAWERS.